



LF80

Audio Baby Monitor



EN	2	IT	50
DE	20	ES	66
PT	38	FR.....	82

Parent Guide

This guide contains important information.
Please keep it for future reference.

Important Safety Instructions

The applied nameplate is located in the battery compartment of the Baby Unit and Parent Unit.

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Follow all warnings and instructions marked on the product.
2. Adult setup is required.
3. **CAUTION:** Do not install the Baby Unit at a height above 2 metres.
4. This product is not a substitute for adult supervision of the infant. Supervising the infant is the parent's or caregiver's responsibility. This product could cease operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a medical device and should not be used as such. This product is intended to assist you in supervising your baby.
5. Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
6. **CAUTION:** Use only the batteries provided. There may be a risk of explosion if a wrong type of battery is used for the Parent Unit. The batteries cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of batteries into fire or a hot oven, or mechanically crushing or cutting the batteries can result in an explosion. Leaving the batteries in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Batteries subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to instructions.
6. Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
7. Use only adaptors and batteries listed below.



Power adapter information:
VTech Telecommunications Ltd.
Model : VT05EEU06040



Rechargeable batteries information:
1. GPI International Limited AAA 930mAh NiMH (GNRHC103C000); 2. YIYANG CORUN BATTERY CO., LTD. AAA 950mAh NiMH (Ni-MH AAA950)

8. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
9. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
10. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
11. Unplug the power cords before replacing batteries.
12. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
13. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
15. Do not overload wall outlets or use an extension cord.
16. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.

18. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
19. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
20. You should test the sound reception every time you turn on the units or move one of the components.
21. Periodically examine all components for damage.
22. There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. To protect your privacy, make sure the product has never been used before purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you will not use it for some time.
23. Children should be supervised to ensure that they do not play with the product.
24. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Cautions

1. Use and store the product at a temperature between 0°C and 40°C.
2. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
3. Batteries should not be exposed to excessive heat such as bright sunshine or fire.
4.  **Warning—Strangulation Hazard—** Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 0.9 m away). Do not remove this tag. 
5. Never place the Baby Unit inside the baby's crib or playpen. Never cover the Baby Unit or Parent Unit with anything such as a towel or a blanket.
6. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

"The Federal Office for Radiation Protection (BfS) and the German Commission on Radiological Protection (SSK) recommend that exposure to low-frequency and high-frequency fields is limited as much as possible and that the recommended maximum values are not exceeded. These recommendations apply especially for children. They correspond to tried-and-tested methods in radiation protection and take into account scientific uncertainty in risk assessments. For example, epidemiological studies have indicated that weak low-frequency magnetic fields may possibly slightly increase the risk of childhood leukaemia. The International Agency for Research on Cancer (IARC) has thus classified low-frequency magnetic fields as a possible carcinogen (high-frequency electromagnetic fields also have the same classification, although for a different reason). As a precautionary measure, exposure to high-frequency and low-frequency fields should thus be kept as low as possible - especially for babies and small children.

As well as by using a device labelled with the Blue Angel environmental label, precautionary measures of your own can contribute to a further reduction in exposure:

- Place the device at a distance of 1.0 m from the child's bed
- Also ensure, in particular, that the power supply unit or an adapter for power line communication are placed as far as possible from the child."

What's Included

Baby Unit



Parent Unit




Accessories





Connect and Charge the Baby Monitor

1. Install Parent Unit Batteries


1

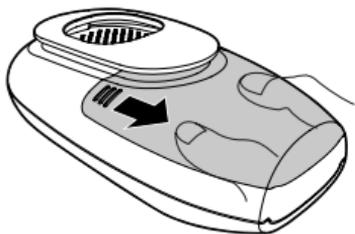

2

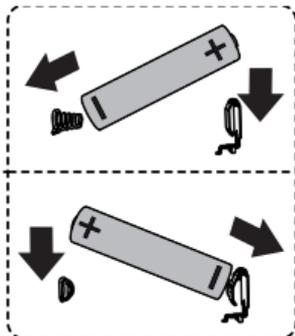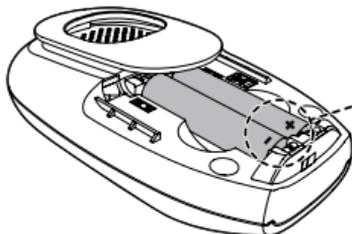

3

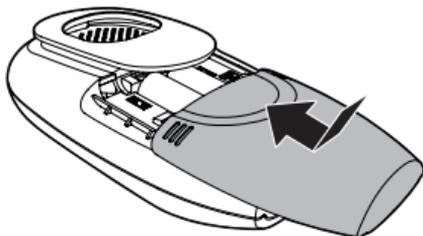


Notes:

- Only use and replace batteries with models listed in Important Safety Instructions (7).
- If Parent Unit will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.


Connect and Charge the Baby Monitor

2. Install Baby Unit Batteries


1

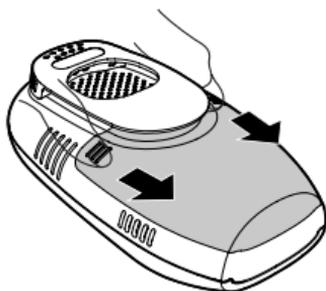

2

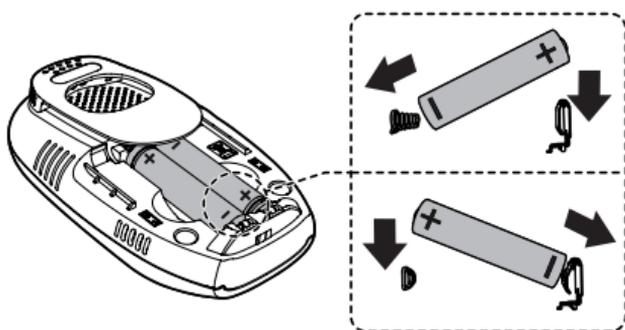

3

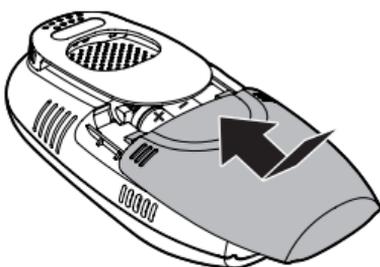


Notes:

- Only use and replace batteries with models listed in Important Safety Instructions (7).
- If Parent Unit will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.

Connect and Charge the Baby Monitor

3. Connect the Baby Monitor

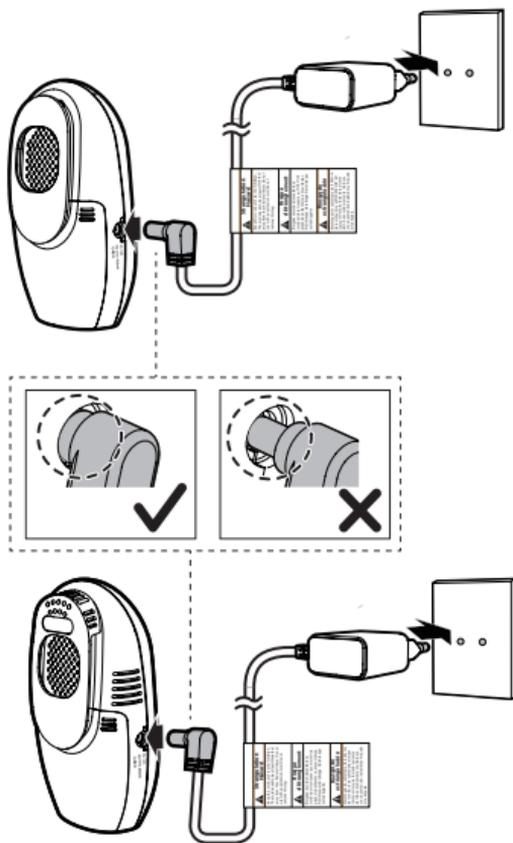

Notes:

- Use only the power adapters supplied with this product.
- If your Audio Monitor is connected to a switch controlled socket, make sure it is switched on.
- Connect the power adapters in a vertical or floor mount position only.
- Make sure Parent Unit, Baby Unit and the power adapter cords are out of reach of children.

Connect and Charge the Baby Monitor

4. Charge the Baby Monitor

When you have connected and turned on the Parent Unit and Baby Unit, their batteries will charge automatically.

The battery icon on the screen indicates battery status:


Battery Indicators	Battery Status	Action
The unit beeps and the screen displays  .	The battery is low in power and may only be used for a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid  .	The battery is fully charged.	To keep the battery charged, power and connect unit to AC power when not in use.

Notes:

- Before using the Audio Monitor for the first time, charge the Parent Unit and Baby Unit batteries for 12 hours.
- The standby time varies depending on the sensitivity level you set, your actual usage, and the age of the batteries.

5. Power On or Off the Baby Monitor


- 1 Press and hold  to power on or power off Baby Unit.

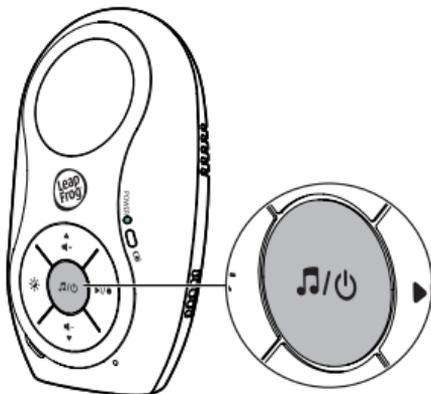

Connect and Charge the Baby Monitor


5. Power On or Off the Baby Monitor

- 2 Press and hold  to power on or power off Parent Unit.

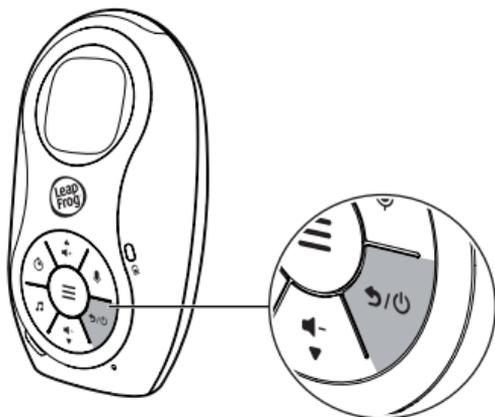

Position the Baby Monitor

1

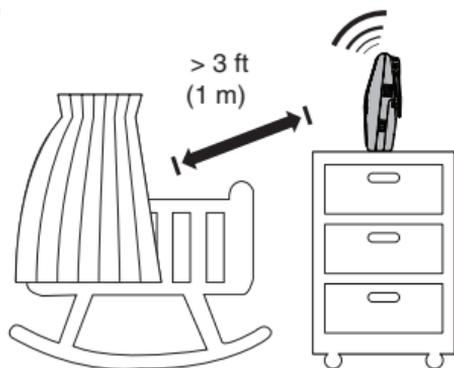


Caution:


- The default speaker volume of your Parent Unit is level 3. If you experience feedback from your baby monitor while positioning:
 - Make sure your Baby Unit and Parent Unit are more than 2 metres apart, OR
 - Turn down the volume of Parent Unit.

Position the Baby Monitor


2

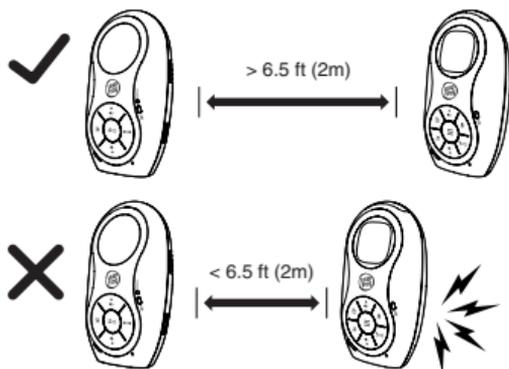

3

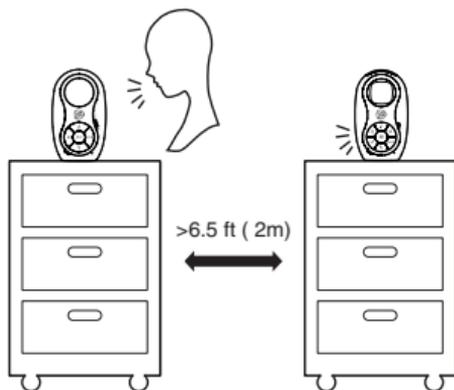


4

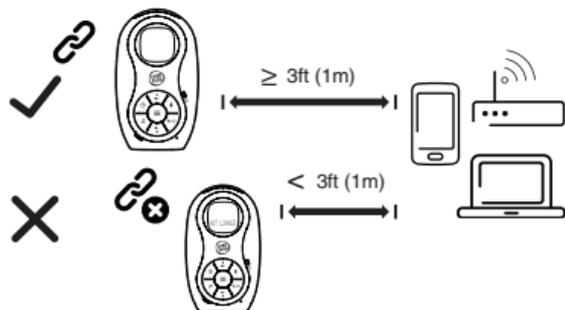

Notes:

- To avoid interference from other electronic devices, place your baby monitor at least 1 metre away from devices such as wireless routers, microwaves, cell phones and computers.

Baby Unit Overview

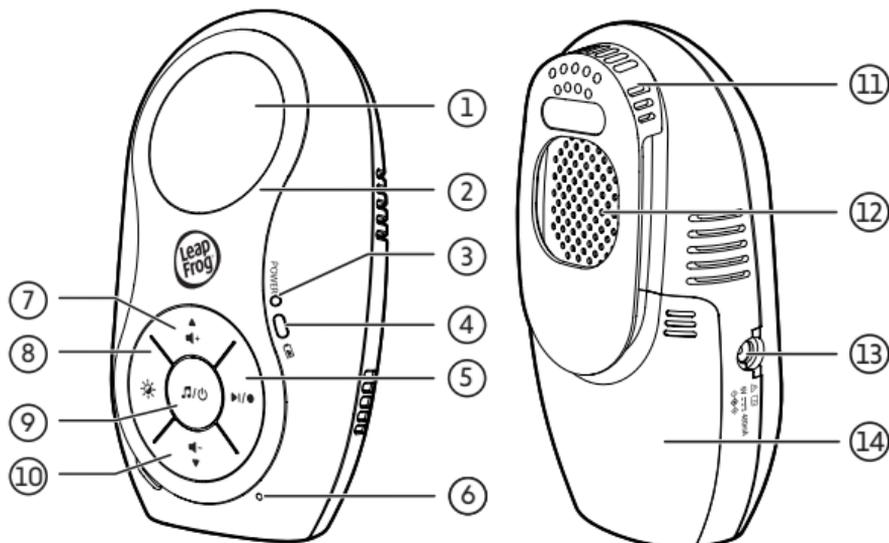

1 **Night light**

- On when night light is turned on manually.
- Off when night light is turned off manually.

2 **Changeable face plate**

3 **POWER light**

- On when Baby Unit is powered on.
- Off when Baby Unit is turned off.

4 **Battery indication light**

- On when Baby Unit's batteries are charging.
- Flashes when the batteries are low and need charging.

Baby Unit Overview

5 

- Press to play the next lullaby.
- Press and hold to record your own voice for up to 20 seconds. Release when finish recording. The recorded voice will be saved as SONG 5.

6 **Microphone**

7 

- Press to increase the speaker volume (Level 1 to Level 5).

8 

- Press to turn the night light on or off.
- Press and hold to adjust the brightness of the night light.

9 

- Press and hold to power on, and the power light turns on.
- Press and hold to power off, and the power light turns off.
- When Baby Unit is powered on, press to play the selected lullaby or the recorded voice. Press again to stop playing.

10 

- Press to decrease the speaker volume (Level 1 to Level 5).


11 **Belt clip with temperature sensor**

12 **Speaker**

13 **Power jack**

14 **Battery compartment cover**

Parent Unit Overview

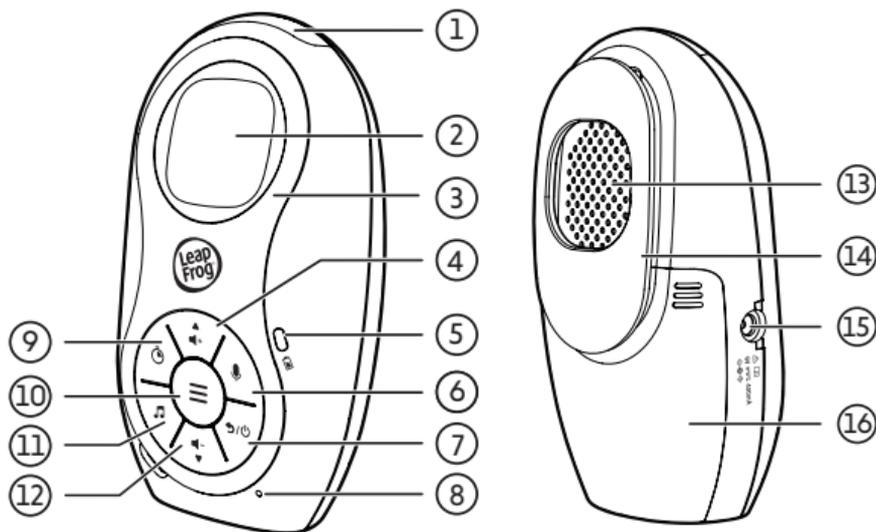

1 **3- level sound indicator light**

- Green when low sound level is detected by Baby Unit.
- Green and amber when moderate sound level is detected by Baby Unit.
- Green, amber and red when high sound level is detected by Baby Unit (e.g. baby crying loudly).

2 **LCD display**

3 **Changeable face plate**



- Press to increase the speaker volume (Level 1 to Level 5).
- While in a menu, press to scroll up.

5 **Battery indication light**

- On when the Parent Unit's batteries are charging.
- Flashes when the batteries are low and need charging.

Parent Unit Overview

- 6 
 - Press and hold to talk to your baby.
- 7 
 - Press and hold to power on and power off Parent Unit.
 - While in a menu, press to return to the previous menu.
- 8 **Microphone**
- 9 
 - When in idle mode, press to set the alarm timer.
 - When setting the alarm timer, press to exit.
- 10 
 - Press to enter the main menu.
 - While in a menu, press to choose an item, or save a setting.
 - When setting the alarm timer, press to exit.
- 11 
 - Press to play or stop playing the lullaby or recorded voice.
 - When setting the alarm timer, press to reset the timer.
- 12 
 - Press to decrease the speaker volume (Level 1 to Level 5).
 - Press repeatedly until the volume reaches the minimum to turn it off.
 - While in a menu, press to scroll down.
- 13 **Speaker**
- 14 **Belt clip**
- 15 **Power jack**
- 16 **Battery compartment cover**

Product Warranty



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech.

Please contact the place of purchase.

The provision of spare parts for the repair of the device is guaranteed for at least 3 years following the termination of production. Visit www.leapfrog-babycare.eu for more information on spare part purchase and product repair.

Disposal of Batteries and Product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

Declaration of Conformity

This product is intended for use within Europe.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 2014/53/EU.

VTech Telecommunications Ltd. hereby declares that this Audio Baby Monitor LF80 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The Declaration of Conformity for LF80 is available from www.leapfrog-babycare.eu.



General Product Care

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- Clean with a soft cloth.
- DO NOT immerse the Parent Unit and the Baby Unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners.
- Make sure the Parent Unit and the Baby Unit are dry before you connect them to the mains again.

Customer Support



Find the answer to your questions.
Get assisted at your own pace using our knowledge-rich full Online Manual, or contact Customer Support with your inquiries.



Scan the QR code to access our website
or visit www.leapfrog-babycare.eu

Technical Specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Baby Unit: 1881.792 - 1897.344 MHz Parent Unit: 1881.792 - 1897.344 MHz Maximum power used by the transmitter: 0.25W (250mW)
Channels	10
LCD	35 (x) x 21.2 (y) mm B&W LCD
Nominal effective range	Actual operating range may vary according to environmental conditions at the time of use.
Power requirement	Baby Unit / Parent Unit: 1.2V 930/950mAh Ni-MH battery Baby Unit / Parent Unit power adapters: Output: 6V DC 400mA

Importer: Snom Technology GmbH.

Wittestraße 30G, 13509, Berlin (Germany)

Manufacturer: VTech Telecommunications Ltd.

23/F., Tai Ping Industrial Centre, Block 1, 57 Ting Kok Road, Tai Po, Hong Kong



Specifications are subject to change without notice.
© 2021 LeapFrog Enterprises, Inc.
a subsidiary of VTech Holdings Limited.
All rights reserved. 11/21. LF80-X_QSG_V1.